



# Control +

## Control any device you want

Ref:  
BJ-259



Control any device in your home from your Android or iOS tablet or smartphone using this customisable remote control. Thanks to its infrared learning system you will be able to control your household infrared-enabled devices such as TV, HiFi, etc. With the appropriate accessories you will also control other elements like doors, lights, beds, ceiling lifts, blinds, electrical appliances and warning alarms.

- ✓ **Customise each button's** function according to your requirements.
- ✓ **Control everything you need** as you have an unlimited number of functions.
- ✓ **Memorise the functions** of any other remote control for a TV or similar.
- ✓ **Control different elements with the Radio Frequency** system without having to face emitter and receiver and even from another room.
- ✓ **Select the number of buttons and their distribution in any level.** You can create as many levels as you need or wish to have.
- ✓ **Personalise the buttons** with the images that you want.
- ✓ **Set macros:** a single button activates a sequence of actions.
- ✓ Activate the switch output from the tablet or smartphone
- ✓ Use the switch input to control directly one device when the tablet or smartphone is off.
- ✓ **Compatible with any access system** to the smartphone or tablet (touchscreen, mouse, switch...)

### TECHNICAL FEATURES

#### HARDWARE

- Bluetooth Low Energy
- Radio Frequency: 433 MHz (ICM).
- Infrared frequency: 39 kHz.
- Size: 81 x 49 x 12 mm
- Compatible with BJLive! Enablers
- Switch input 3.5 mm mono jack (female)
- Switch output 3.5 mm mono jack (female)
- Long life Ion-lithium battery (3 weeks in normal use)
- Charge using a USB cable


#### SOFTWARE

- iOS and Android versions
- Unlimited number of levels and buttons
- Variable size buttons
- Customisable button image and text
- Possibility of importing and exporting the configuration files
- Transparent cells to customise the layout
- Macros: Set an unlimited number of actions per button
- Collection of standard icons included
- Possibility of recording infrared alternate codes.
- Scroll mode option
- Favourite buttons always onscreen

### COMPATIBLE WITH ANY ACCESS SYSTEM



### CUSTOMISE THE FUNCTIONS AND THE APPEARANCE OF YOUR REMOTE TO CONTROL YOUR WORLD

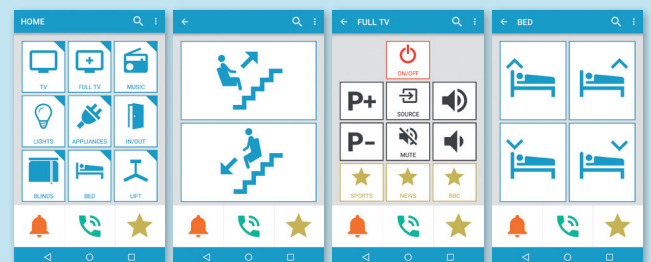

**FULL AUTONOMY AVAILABLE OR EVERYONE!**  
Control your environment and enjoy!

**BJLive!**  
smart solutions that suit you

t. +34 93 285 04 37  
info@bjliveat.com  
www.bjliveat.com